



## User Manual for PDR functions in SRT 7335 CI/SRT 8300 CI/SRT 8345 CI

The following manual describes the new functions with the PDR Software.




1. Switch ON your receiver and connect the external USB-Hard disk to the USB connector at the rear panel of the receiver.
2. If the USB-Hard disk is recognised successfully you will get message to format your device to FAT32 in "*Application*" > "*USB*" menu.
3. Then press the **Yellow (Format)** button to confirm. After ~10 to 20 sec. formatting will be finished and you can exit the menu with **MENU** or **EXIT** button.
4. Go to "*Application*" > "*PDR*" menu to adjust the recording duration.
5. Set Timeshift to *OFF* or *ON* as preferred.

 



Now you are ready to use the PDR functions.



### **Record:**

- a) Select a desired channel you want to record.  
Press the  (Record) button on your RCU to start recording.
- b) In EPG select the event you want to record and press the  (Record) button.


### **Play:**

 



If you already have done records call up the "*Recording File List*" by pressing  (Play). Then select the file with the   buttons and start playback by pressing **OK**.



You can activate Fast Forward or Fast Rewind during playback by pressing the   or   buttons. Another pressing of these buttons will change the speed (FF: x2, x4, x8; FR: x1, x2, x4, x8).

To chose a specific position or scene in the playback press **INFO** and choose the desired position with the   buttons.

### **Timeshift:**

Timeshift in TV mode: press **II** (Pause), the picture will get frozen. To continue watching the programme press  (Play).

You can activate Fast Forward or Fast Rewind during Timeshift by pressing the   or   buttons. Another pressing of these buttons will change the speed (FF: x2, x4, x8; FR: x1, x2, x4, x8).

To choose a specific position or scene in Timeshift mode press **INFO** and choose the desired position with the   buttons.

To leave Timeshift press **■** (Stop).